





Thank you for purchasing our product. Before installing/operating the product, read the instructions carefully and retain them for future reference.

- For installation, follow the steps described. Any damage caused by wrong installation shall be imputed to the users.
- To avoid a short circuit from occuring do not pull or modify the wires during installation.
- Do not disassemble or change any parts. Opening and dissassembling this unit will void any warranty.
- Maintenance and repairs should be executed by our professionals only.



Hold the Button 1 second

 
Symbol description:

 
NOTE

<u>↑</u> Some procedures must be followed to avoid damages to the product.

WARNING! Certain procedure must be followed to avoid damages to yourself, to the vehicle or to others.

1 Accessories














2 Installation of function

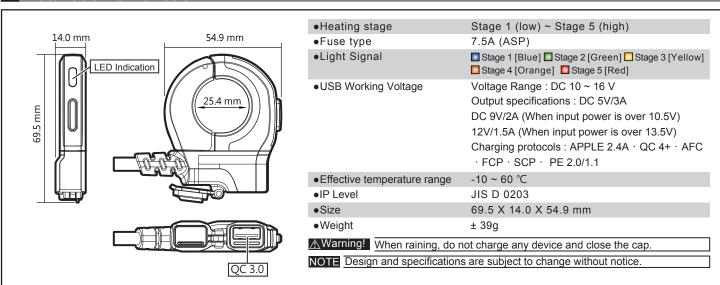

3 Wiring installation instructions

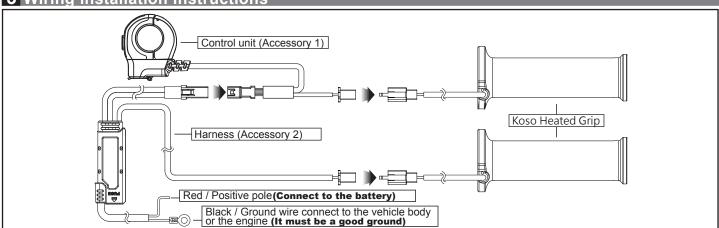

4 Installation instructions

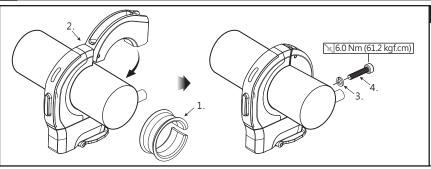


Follow the steps below during installation.

- 1. 7/8" Rubber insert (Accessory 3)
- 2. Control unit (Accessory 1)
- 3. M3 washer X1 (Accessory 5)
- 4. M3 Allen screw X1 (Accessd 6.0 Nm (61.2 kgf.cm)

NOTE (Accessory 3) Determine the diameter of handlebar to decide to install or not.

Adjust the angle to avoid interfering with the button when installing.

5 Heating Function Instruction

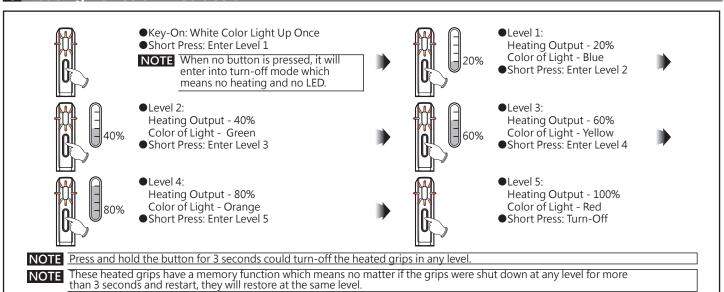

6 Low Battery Warning Instructions



- ●Low Battery Warning Activate Condition: When voltage lower than 11.5 V and more than 5 seconds.
- ●Heating Output : Turn-Off
- ●Indicator: Purple Light Flashing
- Short Press During Warning: Temporary deactivate the warning.
- Short Press During Turn-Off: Purple light flashing 3 times and turn-off.

NOTE Condition to Restore Normal Status: Detected voltage higher than 13 V and more than 5 seconds

7 Caution



• Do not bend the in-line control unit or it might cause the unit to brake.

8 Troubleshooting

The following situation do not indicate malfunction of the product. Check the following before taking it in for repair.

Trouble	Check item	Trouble	Check item
Not charging or Indicator light not functioning.	 ◆There might be no power supplied. →Make sure the wires are connected. →Make sure the positive/negative poles are properly connected. →Battery malfunction or battery voltage lower than 10 V. →Check the wires of product and device. 	When the key is turned on, the heated grip is not heating up.	 It might be the battery is running out. →Check your battery voltage as soon as possible. It might be caused by no power supply. →Check if power harness and fuse are broken or disconnected. →Check if positive pole and negative pole are well connected.