



Thank you for purchasing **KOSO DL-02R tachometer**, before operating the unit, please read the instruction thoroughly and retain it for the future reference.

Notice

1. DC 12V applications only.
2. For installation, please follow the steps described in manual. Any damage caused by wrong installation shall be imputed to the users.
3. To avoid the short circuit, please don't pull the wire when installing. Don't break or modify the wire terminal.
4. Do not disassemble or change any parts excluding the manual description.
5. The interior examination or maintenance should be executed by our professionals.

MARK MEANING:

NOTE You could get the installation details from the information behind the mark.

△ Some processes must be followed to avoid the affection caused by wrong installation.

△ WARNING! Some processes must be followed to avoid damages to yourself or the public.

△ CAUTION! Some processes must be followed to avoid the damage to the vehicle.



PRESS THE
BUTTON ONE TIME




PRESS THE
BUTTON 3
SECONDS

1-1 Accessory


1 Meter X 1




2 RPM wire set (Type A) X 1




3 RPM wire set (Type B) X 1




4 Temp sensor wire set X 2



5 PT 1/8water temp sensor X 2



6 Mid-way connect X 4



7 Meter bracket X 1



8 Handle bar clamp X 1



9 Rubber X 1



10 M6 X 18L screw X 1



11 M5 X P0.8 nut X 2



12 M6 X P1.0 nut X 1



13 M5 washer X 2



14 M6 washer X 1



15 Aluminum bush X 1



NOTE Please contact the local distributor if the items you open are not the same, with the above-listed one.

1-2 Option accessory

1 Temp sensor wire set (2 M)



2 Oil temp sensor adapter



M12 X P1.5 X 15L
M14 X P1.25 X 15L
M14 X P1.5 X 15L
M16 X P1.5 X 15L
M18 X P1.5 X 15L
M20 X P1.0 X 15L
M20 X P1.5 X 15L

3 Water temp sensor adapter



M14
M16.M18
M22.M26m/m

4 Temp sensor




M10 X P1.0
M12 X P1.5
M14 X P1.25
M14 X P1.5
M16 X P1.5 / M18 X P1.5

5 Cylinder head temp sensor




M10.
M14 mm

6 U-type meter bracket



7 Mirror hole meter bracket

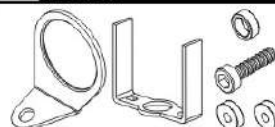


8 Universal adhesive bracket



NOTE Some of the option accessories may not sell. For the details, please contact the local distributor.

2-1 Wiring installation instructions

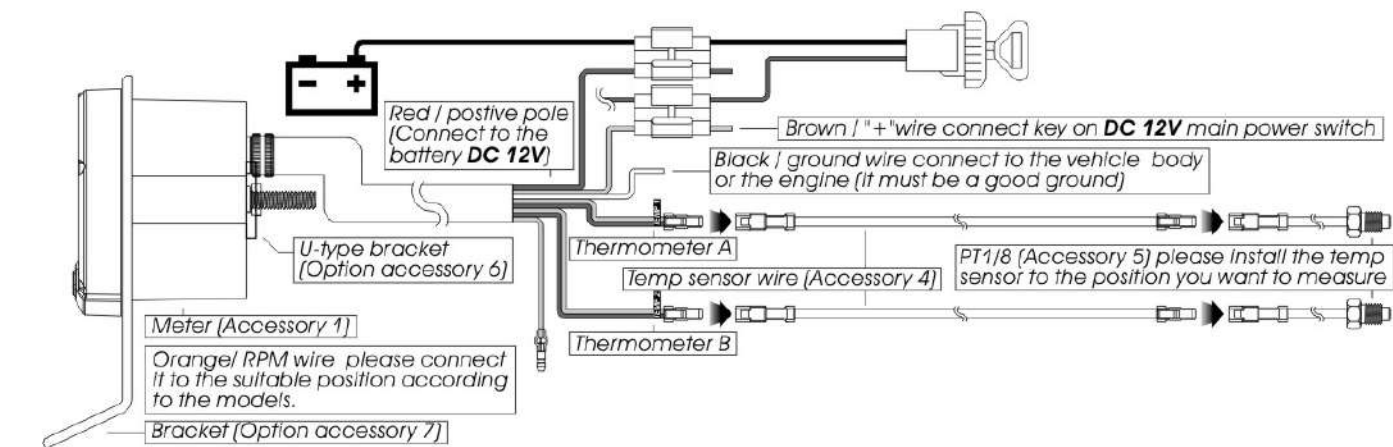

Main switch wiring reference:


	Power	Key on	Ground
YAMAHA	Red	Brown	Black
HONDA	Red	Red / Black	Green
SUZUKI		Black	Green
KAWASAKI	White	Brown	Black / Yellow
KYMCO	Red	Black	Green
SYM	Red	Black	Green
PGO	Red / White	Orange	Black

NOTE The color listed above may differ depending on the model.

RPM wiring reference:

	YAMAHA	BUELL	Pink
HONDA	Yellow / Green	CAGIVA	Gray / Green
SUZUKI	Yellow / Blue	DUCATI	Gray / Green
KAWASAKI	Light Blue	H-D	Pink
APRILIA	Gray / Violet	MV	Gray / Yellow
BMW	Black	TRIUMPH	Red
BENELLI	Gray / Violet		

NOTE The color listed above may differ depending on the model.

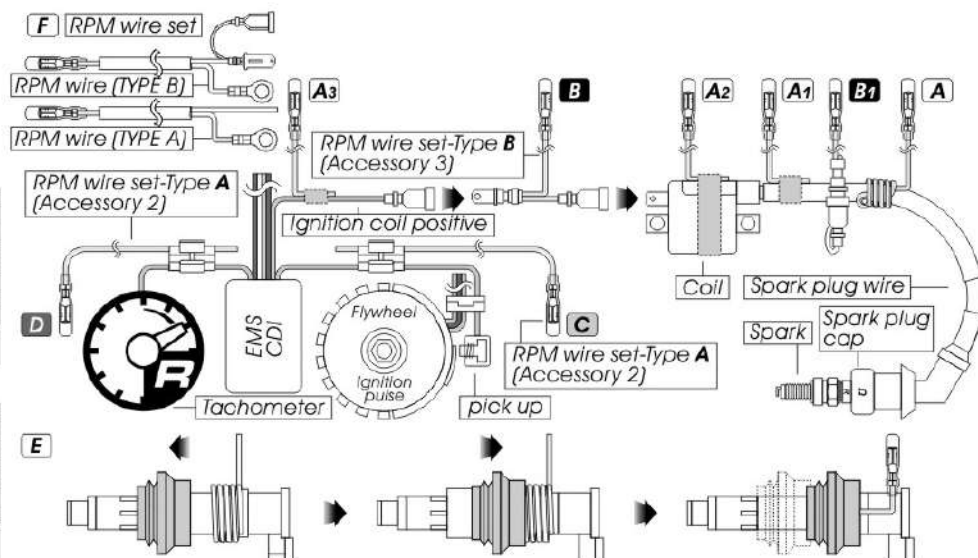

NOTE The temperature will disappear if you don't install & connect the temperature sensor with the meter.

NOTE When connecting the power wiring, please follow the Instruction. If you connect the red & brown wiring in parallel will cause the meter work improperly.

⚠ The RPM wire installation

A. Please wrap the RPM wire at least 5 times around the spark plug.

A1. Please use tape to fix the RPM (Type A) wire onto the spark plug wire.

A2. Please use tape to fix the RPM wire (Type A) on the spark plug cap.

A3. Please use tape to fix the RPM wire (Type A) on the coil positive pole wire. For some models with the coil negative wire, please tape the RPM wire (Type A) on the negative wire to get the RPM signal. (For example, the YAMAHA V-max 1200)

B. Please connect the RPM wire (type B) to connect to the Ignition coil positive pole.

B1. Please wrap the RPM wire (type B) on the spark plug wire by connecting the male and female connector.

C. Please connect the RPM wire (Type A) to the pick up.

D. Please parallel the RPM wire (Type A) with the original tachometer signal wire (This method is available only when the original speedometer comes with a tachometer on it. You could get the RPM wire information from the service manual of your bikes.)


E. For the models comes with the new ignition coil, please wrap the RPM wire (Type A) at least 5 times around the spark plug as the above drawing.

F. Please use the method mentioned above to install the RPM wire, and then connect the ground wire to the bike body or the engine (Please make sure that the ground must be a good ground).

For multi-ignition models, we will suggest you to get the signal on the first ignition.

The best signal source will be in order as D>C>B>A, we will suggest you to check different ways if you have problems to get the RPM signal.

2-2 Installation instructions

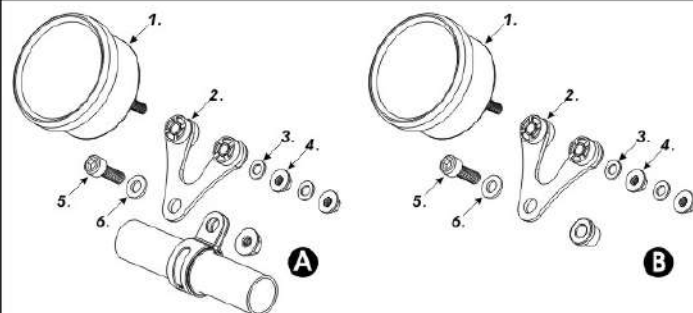

When installing, please follow the process.

1. LCD meter (Accessory 1)

2. Meter bracket (Accessory 7)

3. M5 washer X 2 (Accessory 13)

4. M5 X P0.8 nut X 2 (Accessory 11)

5. M6 X P1.0 screw (Accessory 10)

6. M6 washer (Accessory 14)

A Use the meter bracket (Accessory 7), handle bar clamp (Accessory 8), rubber (Accessory 9) and the nut to install the speedometer on the handle bar.

B Use the aluminum bush (Accessory 15) to install the speedometer on the handle bar stem.

3-1-A Overview

Clockwise

Bar graph tachometer
●Display range: 0~10,000 / 15,000 / 20,000 RPM.

Digital tachometer
●Display range: 0~20,000 RPM.
●Display unit: 100 RPM.

Digital thermometer A
●Display range: 0~250°C (32~482°F)
●Display unit: 1°C (1°F), °C & °F for alternative.



A.Black




B.Chrome

Thermometer A.B


●Display range: 0~250°C (32~482°F)
●Display unit: 0.1°C (0.1°F), °C & °F for alternative.

Clock

●24 H.

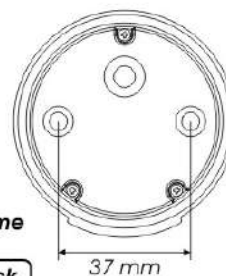

37 mm

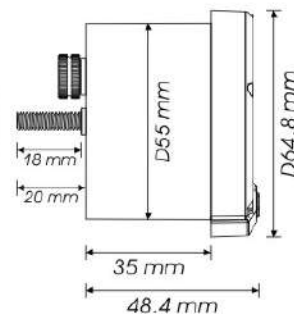

18 mm
20 mm

35 mm
48.4 mm

D55 mm
D64.8 mm

3-1-B Overview

Anticlockwise

Bar graph tachometer
●Display range: 0~10,000 / 15,000 / 20,000 RPM.

Digital tachometer
●Display range: 0~20,000 RPM.
●Display unit: 100 RPM.

Digital thermometer A
●Display range: 0~250°C (32~482°F)
●Display unit: 1°C (1°F), °C & °F for alternative.



A.Black




B.Chrome

Thermometer A.B


●Display range: 0~250°C (32~482°F)
●Display unit: 0.1°C (0.1°F), °C & °F for alternative.

Clock

●24 H.

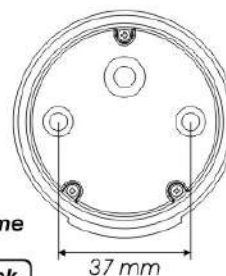

37 mm

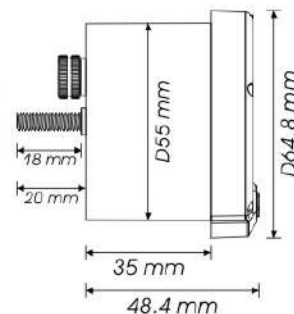

18 mm
20 mm

35 mm
48.4 mm

D55 mm
D64.8 mm

3-1-C Overview

Clockwise

Bar graph tachometer
●Display range: 0~10,000 / 15,000 / 20,000 RPM.

Digital tachometer
●Display range: 0~20,000 RPM.
●Display unit: 100 RPM.

Digital thermometer A
●Display range: 0~250°C (32~482°F)
●Display unit: 1°C (1°F), °C & °F for alternative.



A.Black




B.Chrome

Thermometer A.B


●Display range: 0~250°C (32~482°F)
●Display unit: 0.1°C (0.1°F), °C & °F for alternative.

Clock

●24 H.

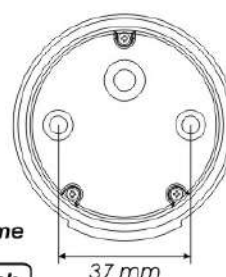

37 mm

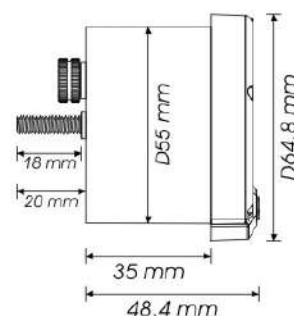

18 mm
20 mm

35 mm
48.4 mm

D55 mm
D64.8 mm

3-1-D Overview

Anticlockwise

Bar graph tachometer
●Display range: 0~10,000 / 15,000 / 20,000 RPM.

Digital tachometer
●Display range: 0~20,000 RPM.
●Display unit: 100 RPM.

Digital thermometer A
●Display range: 0~250°C (32~482°F)
●Display unit: 1°C (1°F), °C & °F for alternative.



A.Black




B.Chrome

Thermometer A.B


●Display range: 0~250°C (32~482°F)
●Display unit: 0.1°C (0.1°F), °C & °F for alternative.

Clock

●24 H.

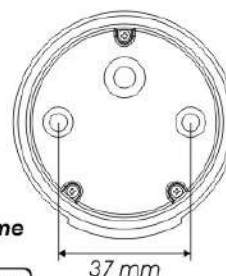

37 mm

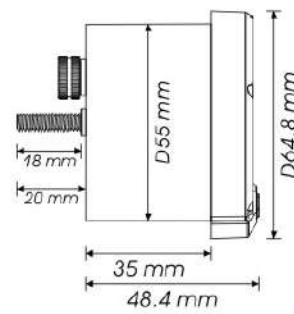

18 mm
20 mm

35 mm
48.4 mm

D55 mm
D64.8 mm

3-2 Function, setting instruction


●Digital Tachometer	Display range: 0~20,000 RPM
●Bar graph tachometer	Display range: 10,000 / 15,000 / 20,000 RPM
○Display internal	<0.5 second
○Max. RPM record	Display range: 0~20,000 RPM
○RPM input pulse	Setting unit: 0.5, 1, 1.5, 2, 2.5, 3, 4, 5, 6
●Thermometer A.B	Display range: 0~250°C (32~482°F) Display unit: 0.1°C (0.1°F) °C, °F for alternative

○Display internal	<0.5 second
○Top temperature record	Display range: 0~250°C (32~482°F)
●Display internal	24 H
●Effective voltage	DC 12 V
●Effective temperature range	-10~+60°C
●Meter standard	JIS D 0203
●Meter size	D55 X 48.4 mm
●Meter weight	Around 190 g


NOTE Design and specification are subject to change without notice!

NOTE If you enter the setting screen for 30 seconds and don't press the button, it will back to the main screen automatically.


4-1-1 Select button function instruction

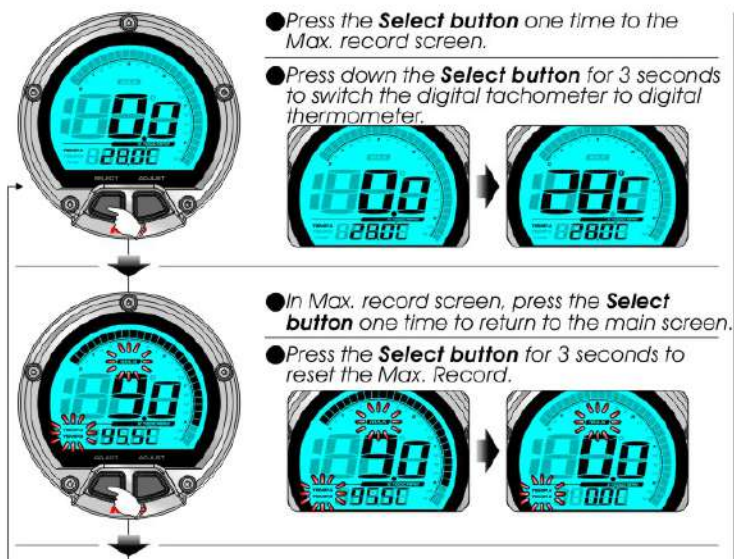



4-1-2 Adjust button function instruction

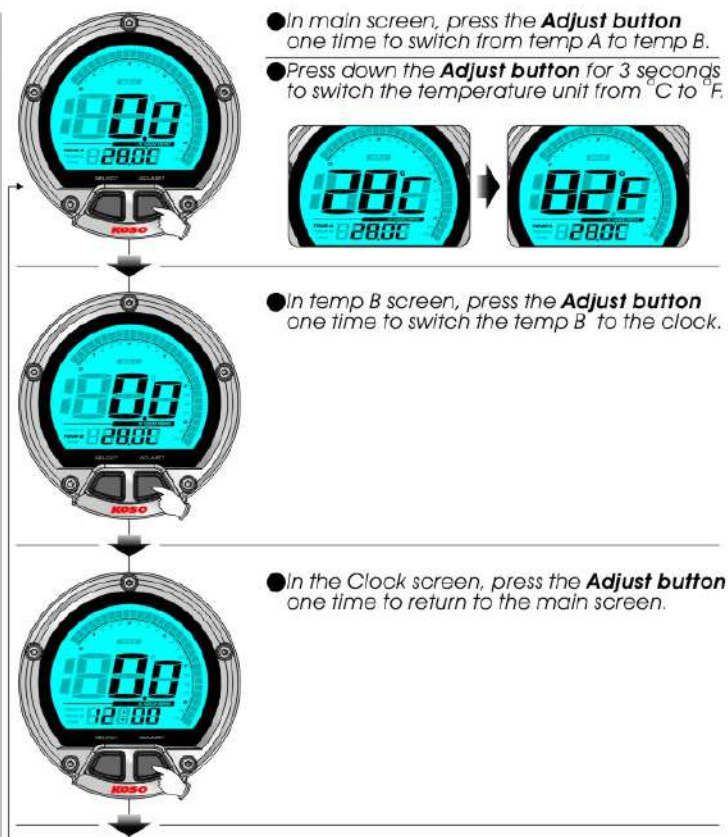

4-2 Cycle / Piston / Input signal /Time setting instruction

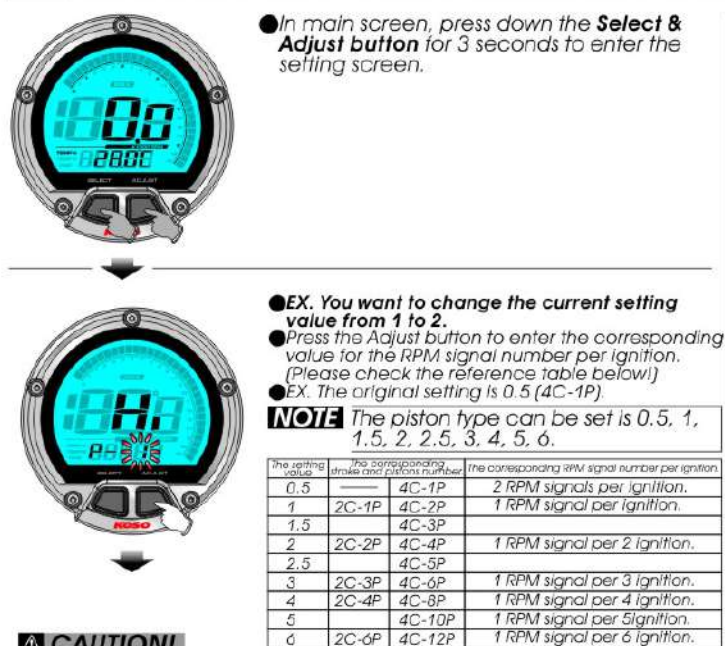

CAUTION!
Most of the 4-cycle bikes with one single piston are igniting every 360 degree once, so the setting should be the same as the bike with 2-cycle and one piston engine.

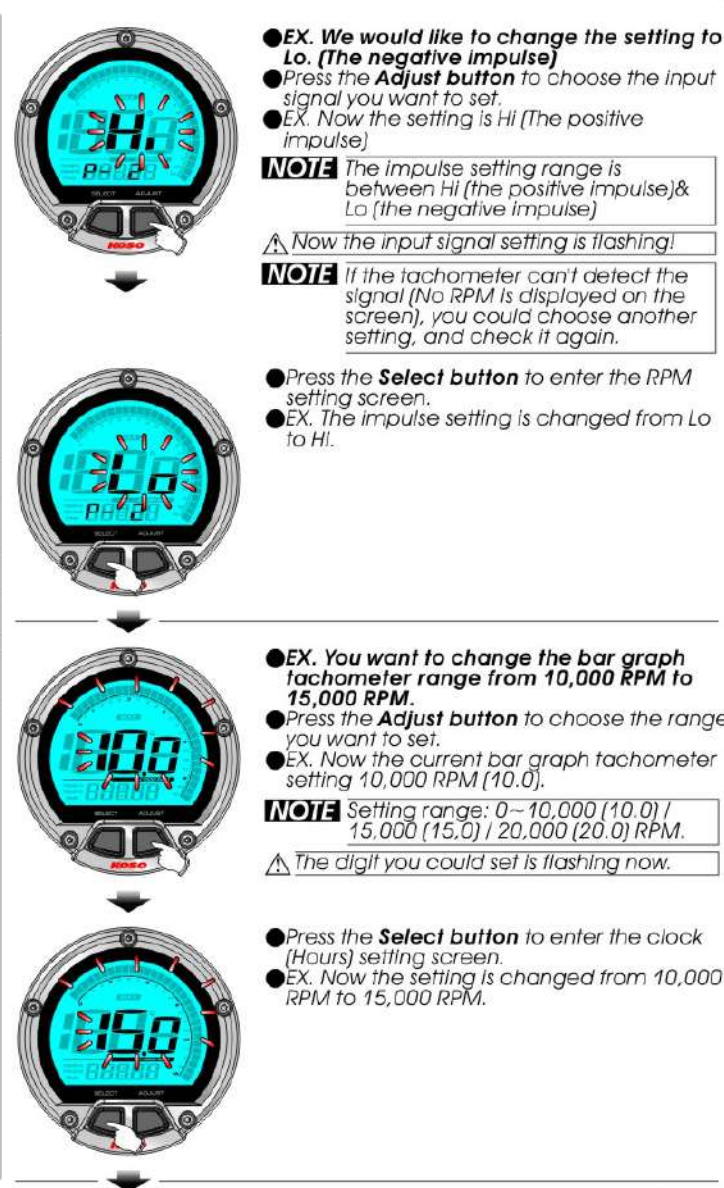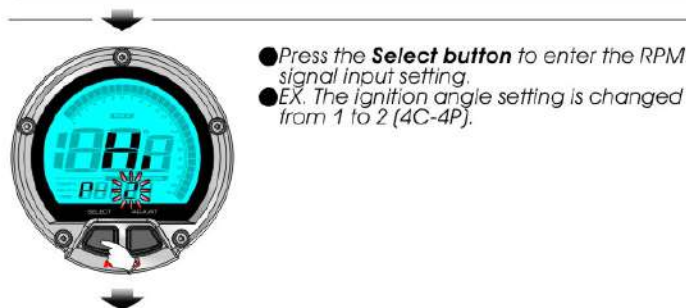



- EX. To change the setting to 13:00.
- Press the **Adjust button** to choose the hour you want to set.
- EX. Now the setting is 0:00.
- NOTE** Setting range: 0~23 H.
- ⚠ The digit you could set is flashing now.



- Then press the **Select button** to enter the minute setting.
- EX. Now the setting is changed from 0:00 to 13:00.



- EX. To change the setting to 13:05.
- Press the **Adjust button** to select the minutes.
- EX. Now the setting is 13:00.
- NOTE** Setting range: 0~59 minutes.
- ⚠ The digit you could set is flashing now.



- Press the **Select button** to back to the main screen.
- EX. Now the setting is changed from 13:00 to 13:05.



- The main screen.

5 Trouble shooting

The following situation do not indicate malfunction of the meter. Please check the following before taking it in for repair.

Trouble	Check item	Trouble	Check item
The meter doesn't work when the power is on.	<ul style="list-style-type: none"> ●The power doesn't supply to the meter. <ul style="list-style-type: none"> →Please make sure the wiring is connected. The wiring and fuse are not broken. →The battery is broken or the battery is too old to supply enough power (DC 12V) to make the meter work. ●Please check the voltage of your battery, and make sure the voltage is over DC 12V. 	Temp does not appear or appear incorrectly.	<ul style="list-style-type: none"> ●Please check the sensor. <ul style="list-style-type: none"> →Does the wiring break or falling off? ●it is possible that the positive wire is connected wrongly. <ul style="list-style-type: none"> →Please check is the red positive wire connect to the permanent power or battery and the brown positive wire is connected to the key on switch positive pole.
The meter shows wrong information.	<ul style="list-style-type: none"> ●Please check the RPM sensor wiring is connected correctly. ●Please check the spark plug is R type or not. If not, please replace the spark plug with the R type spark plug. ●Please check your setting. <ul style="list-style-type: none"> →Please refer to the manual 4-2. 	The clock is Incorrect.	
Tachometer does not appear or appear incorrectly.		The Max. record doesn't work, the meter setting is not recorded.	<ul style="list-style-type: none"> ●it is possible that the permanent power wire is not connected well. <ul style="list-style-type: none"> →Please check the red positive wire is connect well or not.

※If still can't solve the problems according to the steps above, please contact with distributors or us.